



THO SMART TOUCH
FUN
Gehäusedeckel

784 012 / 681 229

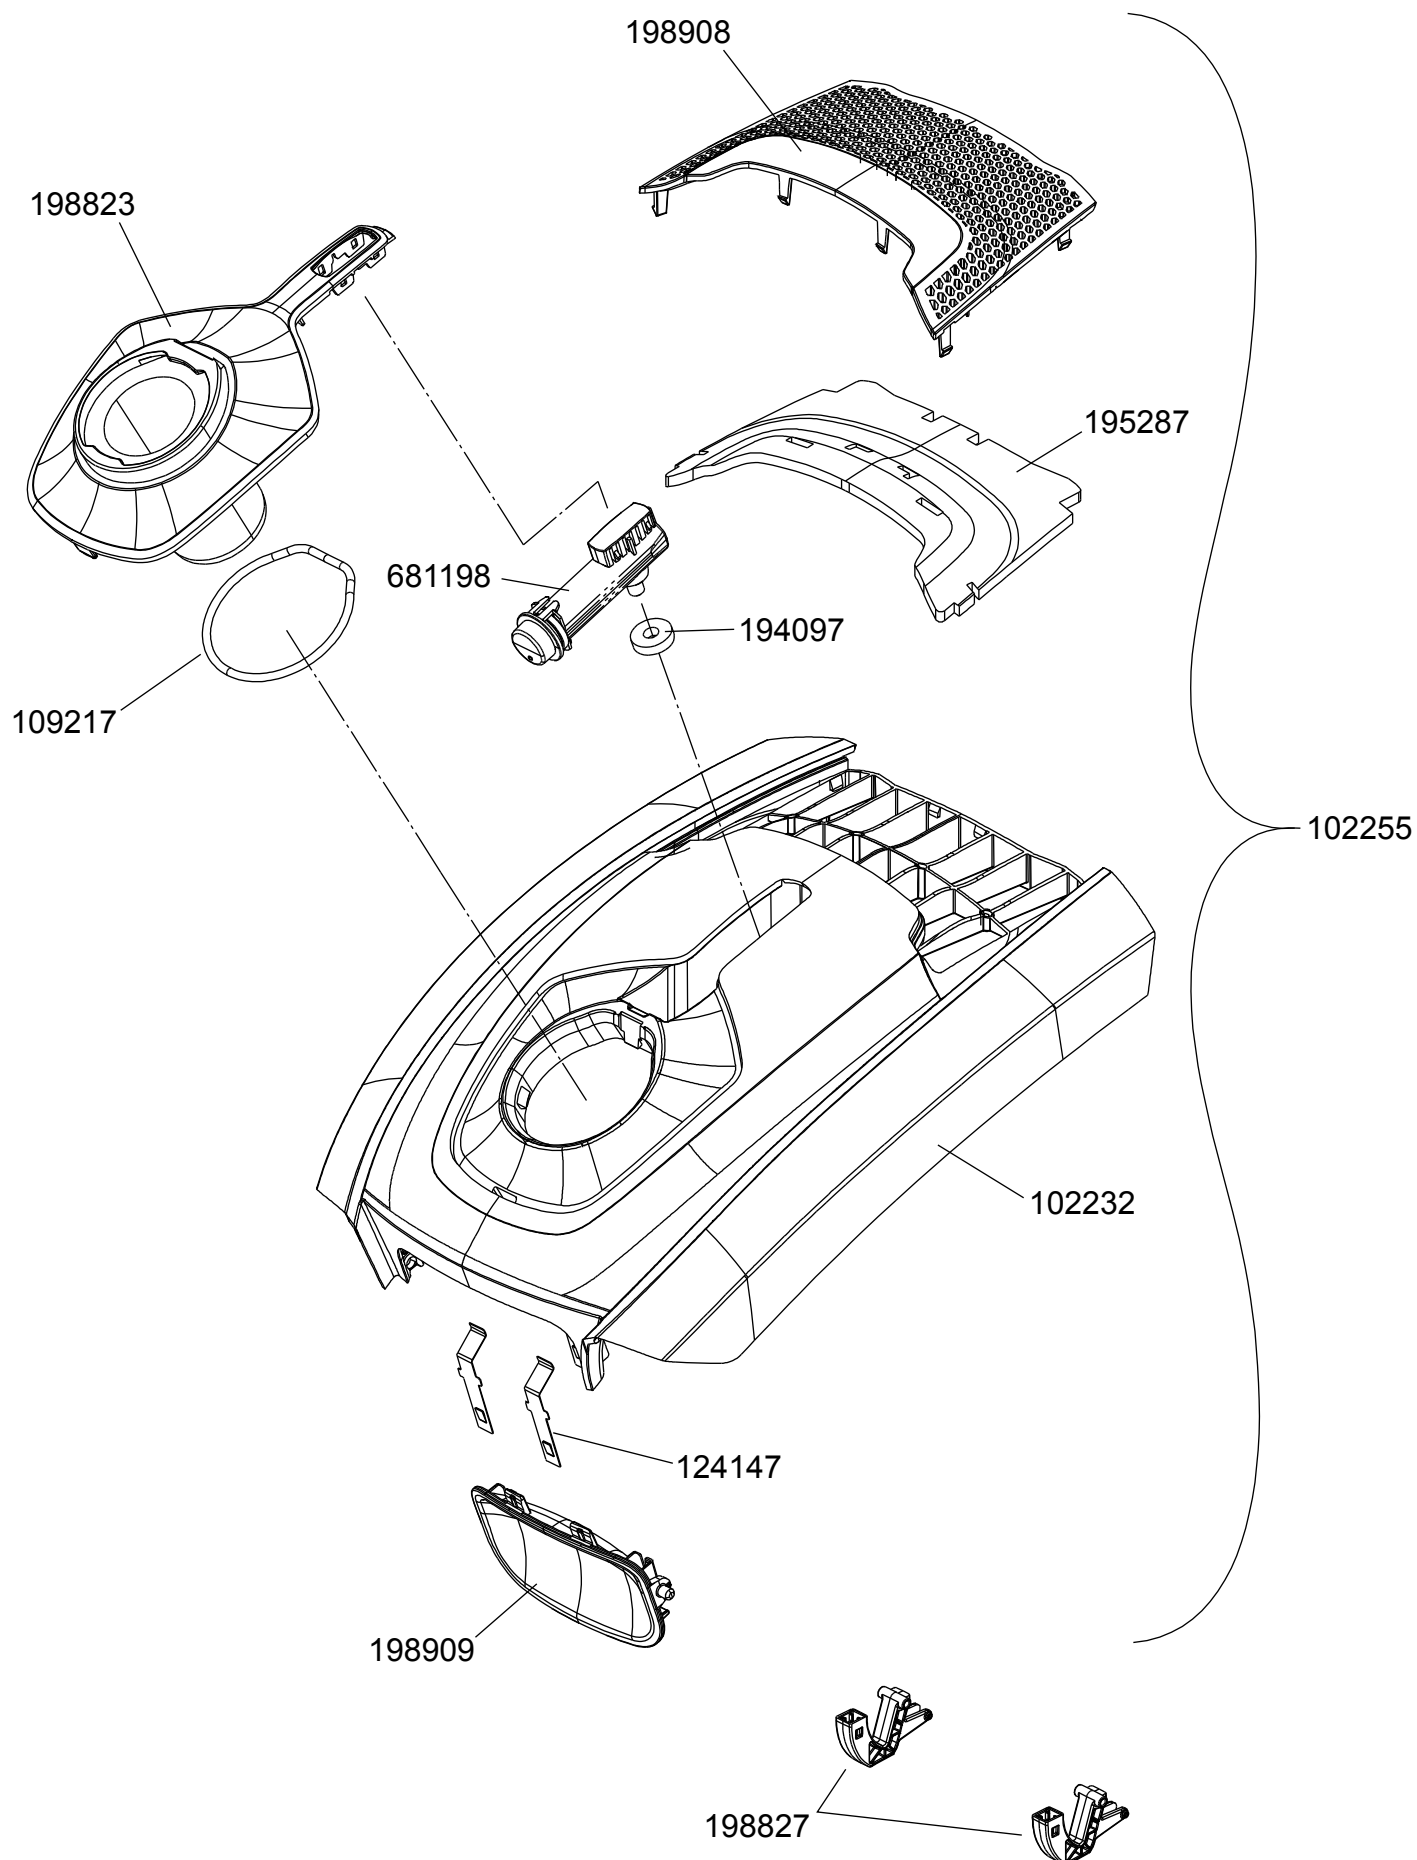


THO SMART TOUCH
FUN
Oberteil

784 012 / 681 228

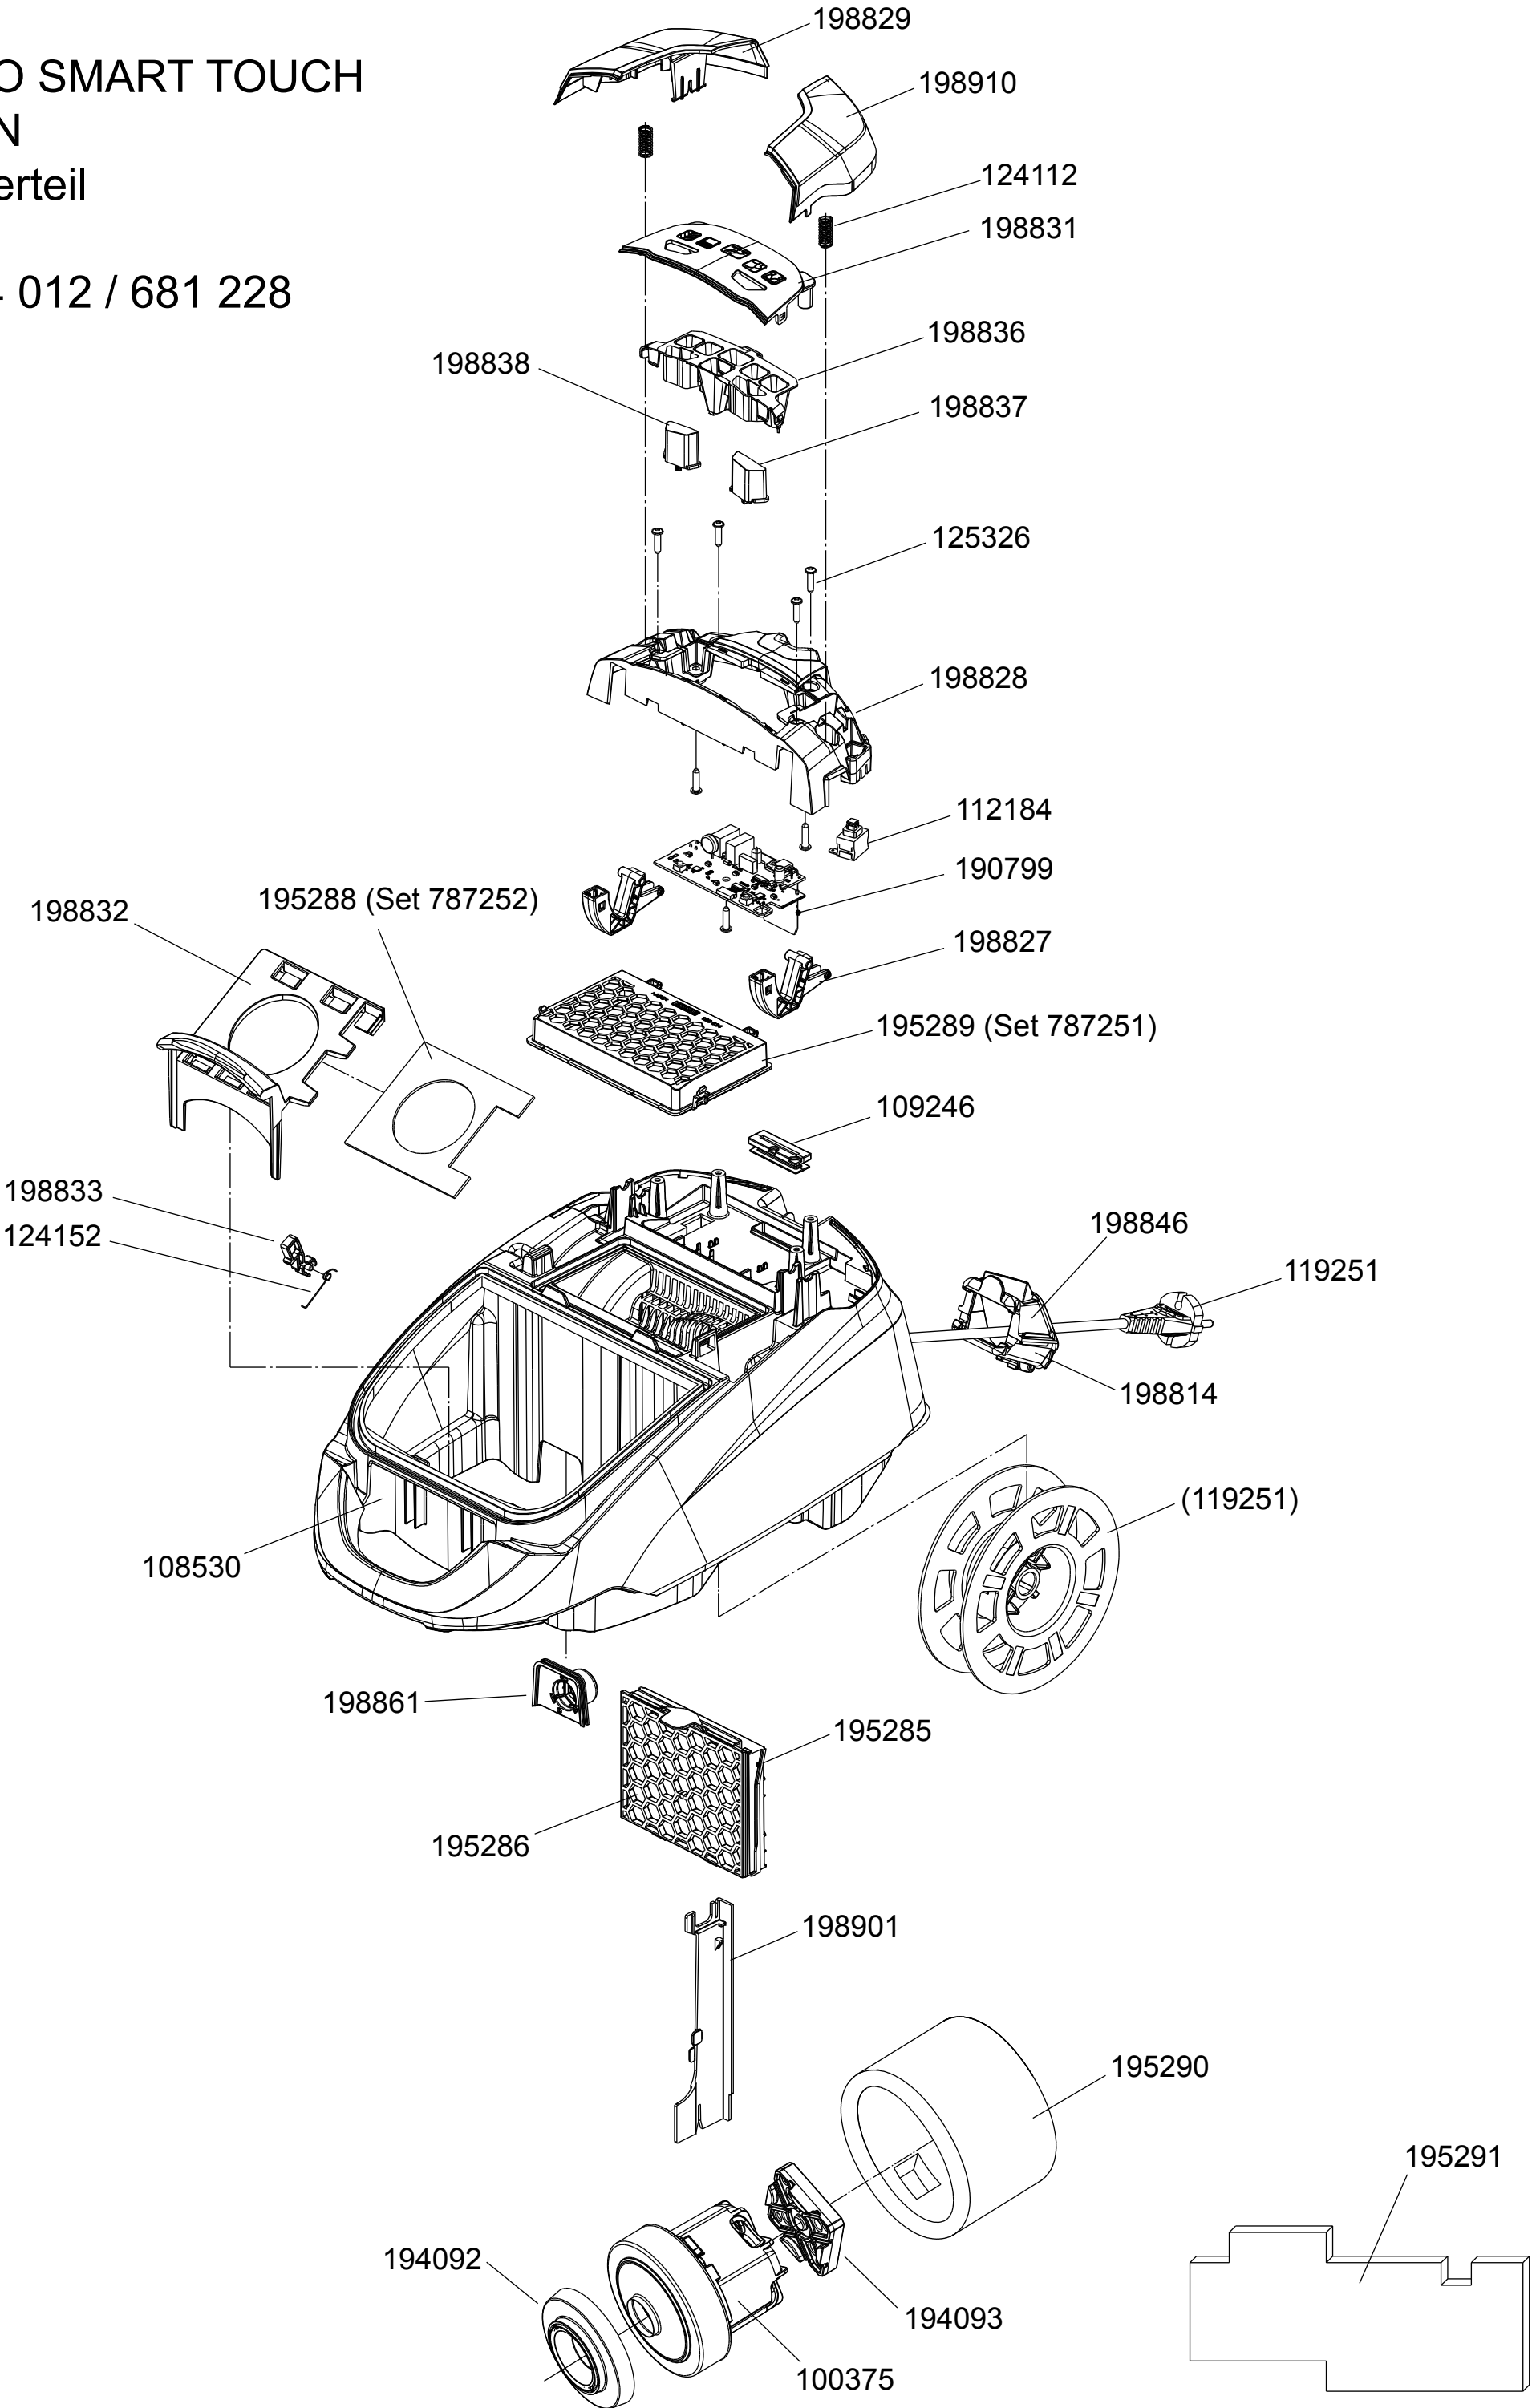

THO SMART TOUCH
FUN
Unterteil


784 012 / 681 217

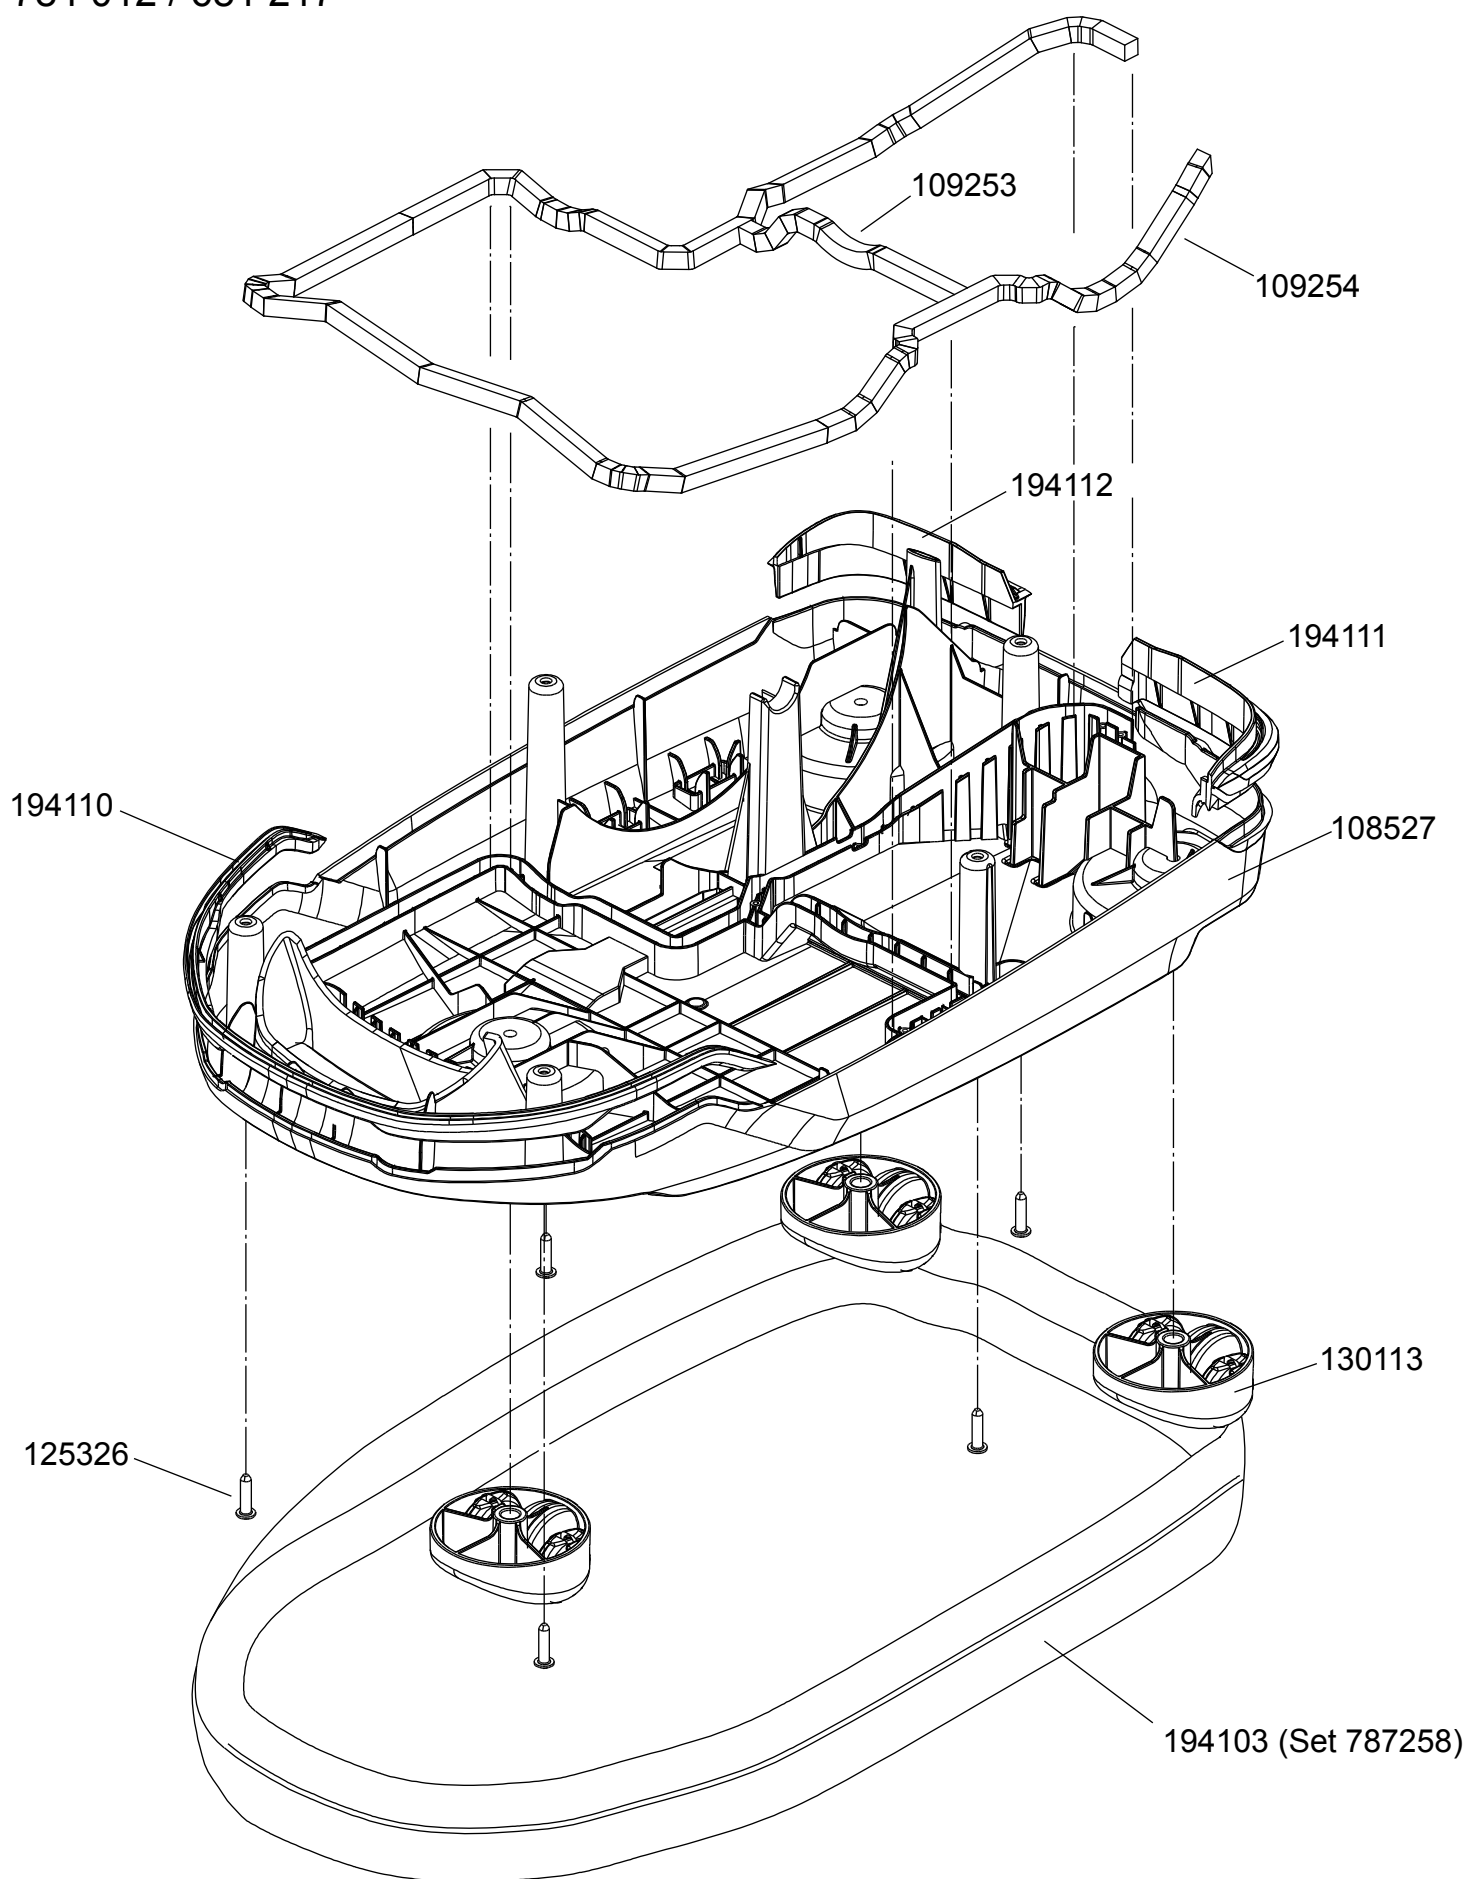

THO SMART TOUCH
FUN
Zubehör

784 012 / 681 197



139948

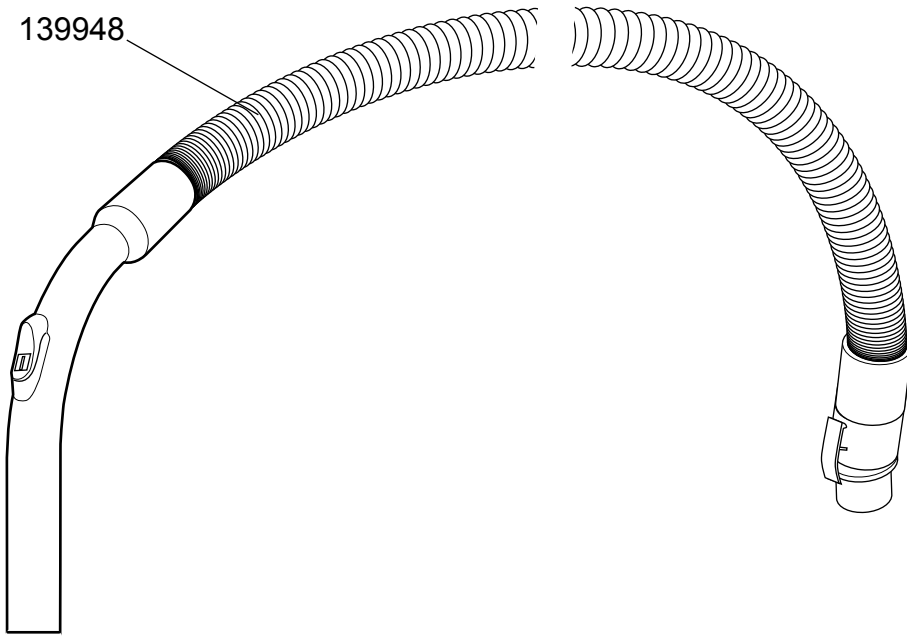



139788

139789

139932

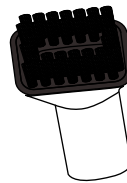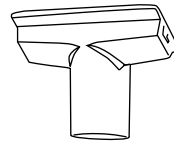


139992

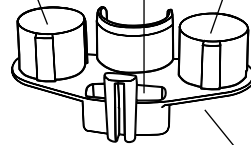 

139934

139933

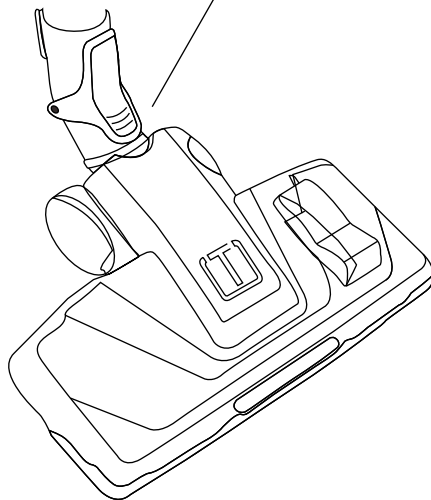

195288 (Set 787252)

